

LPG FILLING INSTRUCTIONS



Check vehicle fill point

- Must be clean
- Rubber seal must be in place



Connect Nozzle

- Align connector to avoid cross-threading
- Turn connector clockwise until tight



Squeeze trigger fully and hold

If leak occurs:

- Release trigger
- Seek assistance immediately

WARNING! DO NOT JAM TRIGGER OPEN WITH OBJECT



When filled release trigger

- Expect small discharge of LPG



Disconnect nozzle and replace